

⚡ OPERATING & CHARGING PROCEDURE

The lamp has Power and Sensor two kinds of switches. While the lamp is off, pressing and holding Power Switch for 3 seconds will activate the battery green indicator, if the green indicator blinks, indicates that the battery is low power and needs charging, this indicator will turn off automatically after 5 seconds. When the battery power is low, switching on the lamp, light will flash 3 times to remind charging. Pressing Power switch will turn on or switch light modes of the lamp. Pressing Sensor Switch can enter or exit the sensor mode.

2645-LMD003-001 Operating modes as below

Normal switch mode:

1. Pressing power Switch the first time, the lamp switches on at Spotlight ECO power mode.
2. Pressing power Switch the second time, the lamp switches to Spotlight normal mode.
3. Pressing power Switch the third time, the lamp switches to Floodlight mode.
4. Pressing power Switch the fourth time, the lamp switches to Spotlight + Floodlight mode.
5. Pressing the power Switch the fifth time, the lamp switches off.
6. While lamp is on at the normal switch mode, pressing Sensor switch will switch to Sensor mode and keep on the same light mode.

Sensor mode:

1. Pressing the Sensor switch first time, the red led indicator will flash to indicate sensor mode.
2. While at sensor mode, swing hand twice in front of the lamp will switch on the lamp, and swing hand twice again will switch off the lamp, and so on.
3. While at the sensor mode and the lamp is on, pressing Sensor switch will exit Sensor mode and turn the lamp off.
4. While the lamp is lighted and at the sensor mode, pressing the power switch will exit the sensor mode and go to normal switch mode, the lamp will keep on at the same light mode.

Switch lamp off and connect with USB charger during charging. The battery green indicator will blink during charging. The green indicator will stay lighting up after finished the charging. If the battery indicator did not light up, please remove the charger and try again.

Always only use the charger recommended to charge the lamp. The use of a Non-recommended charger can lead to a fire and destroy the lamp.

Before taking the hand lamp into service for the first time charge it for 2-3 hours.

Fully charge the hand lamp before it is stored for a longer period.

⚠ WARNING!

Do not open the device.

Do not look directly into the light emitting lamp.

Risk of eye injuries!

Do not operate in direct sun light or extreme temperature conditions.

Operating temperature, -10°C to +40°C.

Keep away from children! Children should be supervised in order to ensure that they do not play with the device!

TECHNICAL DATA	
Light Source	High Power COB LED-Flood Light High Power SMD LED-Spot Light
Luminous Power	120 lm - Spot Light ECO Mode 300 lm - Spot Light Normal Mode 250 lm - Flood Light Mode 500lm - Spot Light+Flood Light Mode
Operating Time	8H - Spot Light ECO Mode 3H - Spot Light Normal Mode 3H - Flood Light Mode 1.5H - Spot Light+Flood Light Mode
Battery Specification	Li-Ion 3.7V, 1500mAh, 5.55Wh
Charging Time	2.5h
Charging Input	DC 5V 1A
Degree of Protection	IP65 , IK07
Operating Temperature	-10°Cto +40°C

SAFETY INSTRUCTIONS

Do not use the device if there is damage to the housing, plug or cable. Consult your local authorized specialist!

Do not open the device! Repair work and replacing the rechargeable battery pack may only be carried out by electricians. Carry out cleaning tasks only when the mains plug is removed from the mains power!

There is a risk of short-circuit. Repairs on the device may only be carried out by commissioned and trained persons.

Please contact your nearest authorized branch.

Protect the battery against heat, e.g., against continuous intense sunlight, fire, water, and moisture. Danger of explosion.

If the battery is damaged or not used correctly. Fluids can leak from the battery. Avoid contact with these. Leaking battery fluids can lead to skin irritation or burns. Rinse off with water if you should come into contact. If the fluid gets into your eyes, make sure you get medical help.

The lamp is not allowed to be placed on the light surface while being switched on.

♻ ENVIRONMENTAL PROTECTION

The device should not be discarded in the normal household waste under any circumstances.

Dispose of the device via an authorized disposal center or your communal waste disposal facility.

Observe the current applicable regulations.

Contact your waste disposal facility in the event of any doubt.

Dispose of all packaging materials via an environmentally friendly disposal facility.

Rechargeable batteries must not be disposed of in the household waste.

Return used rechargeable batteries to your dealer or hand them in to a battery collection facility.

WARRANTY

The guarantee does not apply to damage to the device arising through a failure to comply with the operating instructions.

Subject to technical changes .

We assume no liability for printing errors.